



LOGIC HAND HELD RECEIVER PROGRAMMER PROGRAMMING INSTRUCTIONS

WARNING: DISCONNECT THE RED WIRES ON THE RECEIVER FROM THE SYSTEM BEFORE PROGRAMMING. LEAVING WIRES CONNECTED WILL RE-PROGRAM OTHER RECEIVERS ON THE SYSTEM.

1. To turn on the Programmer press the ON/ENTER button (after 20-30 seconds of no activity the programmer will turn off). The display will read:

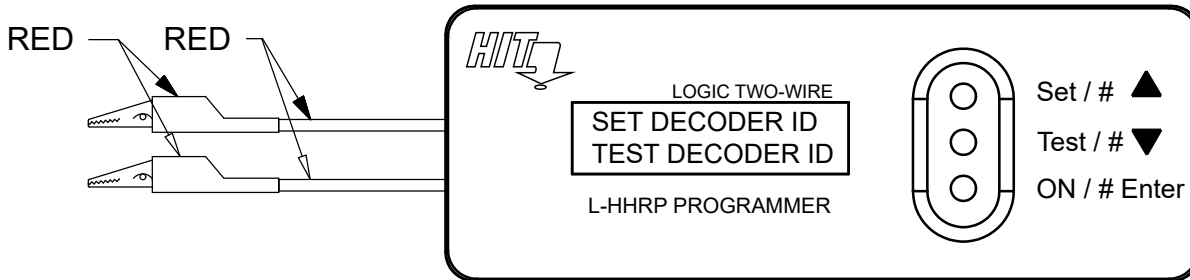


2. Clip the 2 red leads of the Programmer to the 2 red leads of the Decoder/Receiver to be programmed. Be sure the black leads of the Receiver/Decoder are not touching.

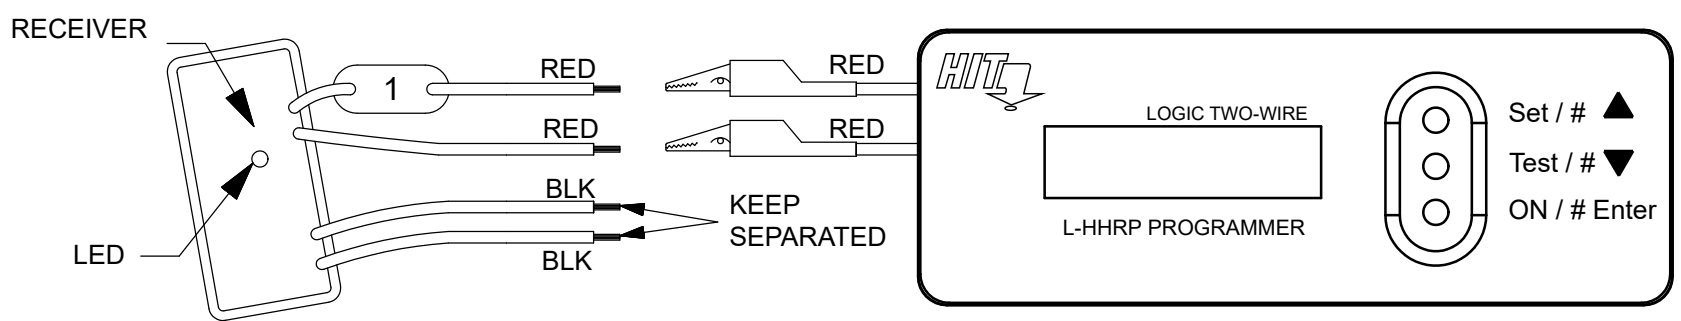

3. To Program a Logic Receiver:


- a. To Program a Decoder/Receiver press the top button. The display will read:

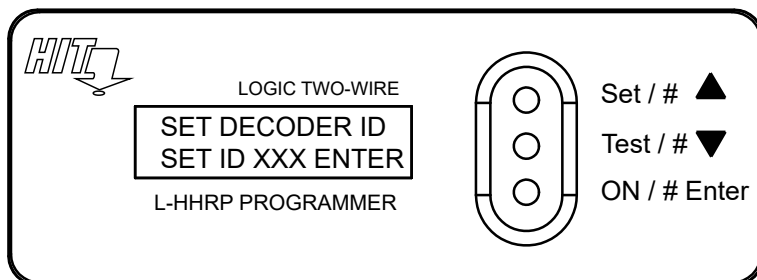

- b. Use the top 2 buttons to scroll up or down to the required number.
- c. Press Enter.
- d. The LED in the Receiver/Decoder will flash 3 times.
- e. The receiver is now programmed.

3. To Test a Logic Receiver

- a. To Test a Decoder/Receiver ID, press the: middle button. The display will read:

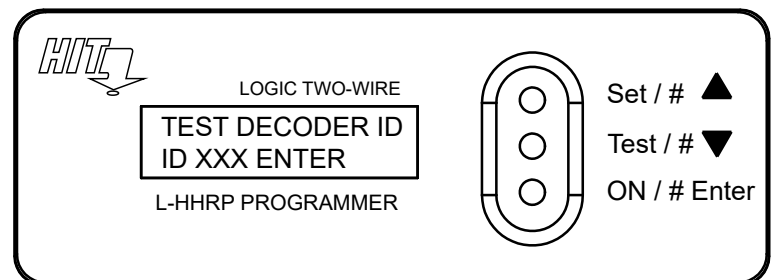

- b. Use the top 2 buttons to scroll up or down to the required number.
- c. Press Enter.
- d. The LED in the Receiver /Decoder will light.
- e. Confirm receiver Receiver/Decoder number.

5. This unit will display "LOW BATTERY":

To replace the battery, remove the six (6) screws from the back cover. Replace the 9V battery and replace the back cover and screws. Be sure to place red wires properly.

