



This Logic Plus S Controller has additional features allowing it to interface with Ranch Systems

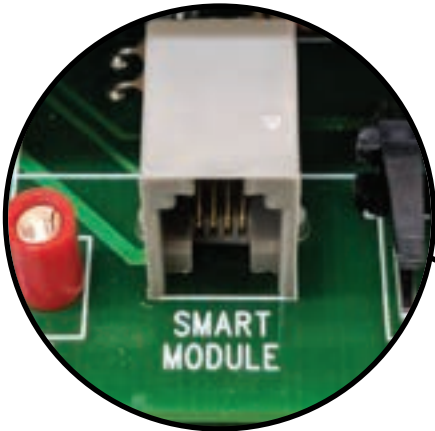

Interface Cable
Supplied by Ranch Systems

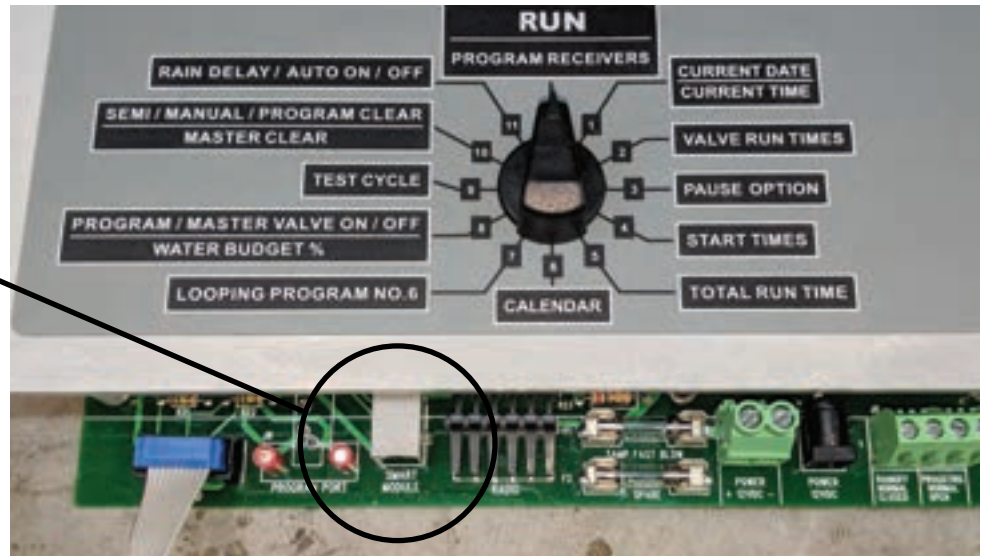

Instructions:

1. Mount and Power up Controller
2. Perform a Master Clear
(See Instruction Manual pg 24-25)
3. Connect Interface Cable
4. Set Controller Mode
Turn dial to position 11
Use the 4th from left UP arrow button to set Mode to RMTE (remote)
Turn Dial to RUN

Notes:

Controller Mode:

This **must** be set to RMTE to communicate with Ranch Systems

Master Clear:

The default for MODE (dial position 11) after a Master Clear is OFF

Set Controller ID :

For multiple Logic Plus S Controllers individual ID #s will be required

Turn dial to position 1

Press Function Button,

Use arrow button to select ID #

Turn dial to RUN